

# DRYWALL REPAIR CLIPS

**The quick and easy solution for repairing large holes or damaged areas in drywall**



- Drywall repair clips, when used with SHEETROCK® gypsum panels, CGC paper or fiberglass joint tape and drywall compound, provide fast, easy repairs of holes (over 2")


- Clips fit both 1/2" and 5/8" thick drywall panels




**CGC**




# Repairing Large Holes (over 2") or Water-Damaged Areas With the CGC Drywall Repair Clips

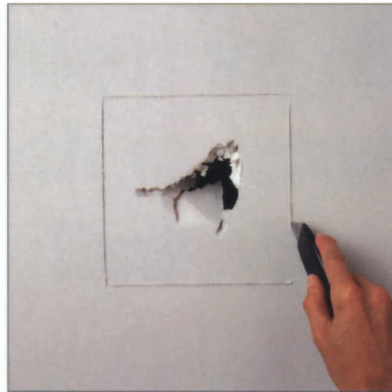


**1** Cut a piece of drywall the size of the area of the wall to be patched. Hold that piece of drywall onto the wall and trace around it with a pencil. Carefully cut out along the pencil line and remove the damaged section of drywall.

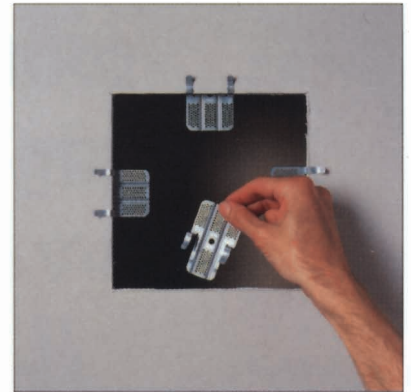

**2** Slip drywall repair clips onto the edge of the damaged wall. Position screws about 3/4" in from edge and centre. This will line up the screws with the perforations in the clips. Screw through wall into each drywall repair clip.

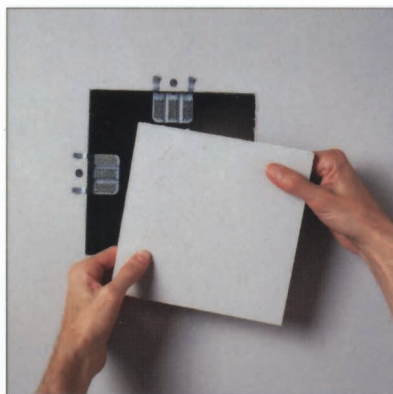

**3** Screw through new drywall into each drywall repair clip about 3/4" from edge. Remove tabs from each drywall repair clip.

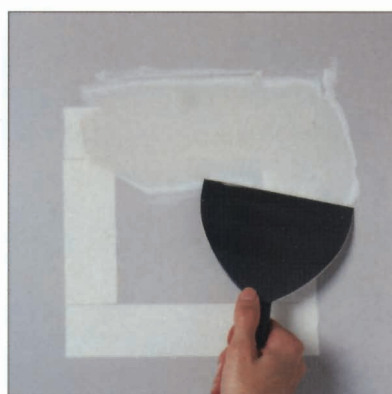

**4** Apply CGC paper or fiberglass drywall tape and compound to patched area. Do not overlap tape. Apply second and third coats of joint compound. Allow each coat to dry before applying next, feathering out from previous coats. Sand, prime and paint when dry.

## Clip Location

On larger sized repair holes the clip should not be placed any further apart than 6" or 6" from the corners. The intention is to secure the patch in place and prevent movement when applying the tape and compound.

## AVAILABLE FROM

### Canadian Gypsum Company

A Division of CGC Inc.  
P.O. Box 4034, Station A  
Toronto, Ontario M5W 1K8  
Internet Home Page: <http://www.cgcinc.com>